

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

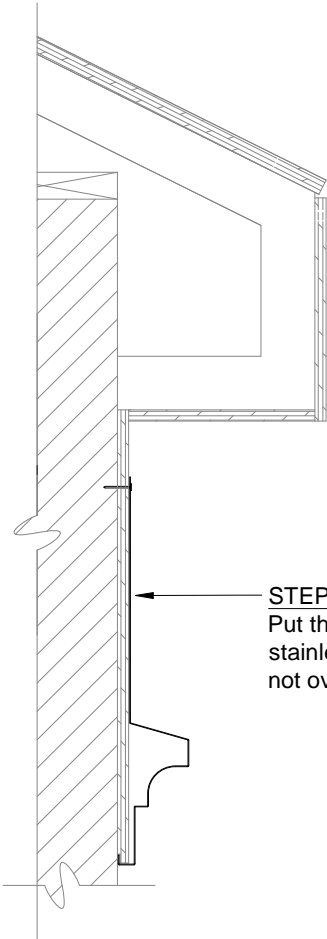

STEP 1 INSTALL C

Put this piece snug against the plywood and use #10x1" stainless screws to fasten this piece to the plywood. Do not overdrive the screws as this will cause oil canning.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

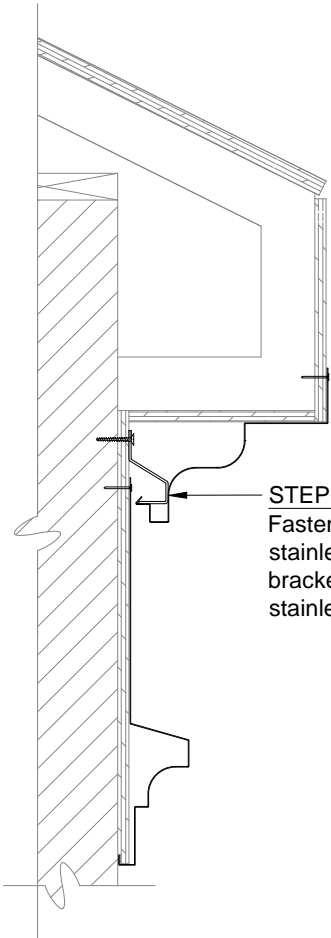

STEP 2 INSTALL B
Fasten mounting bracket to plywood with #10x1" stainless screws, then put the LZ-2 trim around the bracket and fasten the top to plywood with #10x1" stainless screws.

SUBMITTAL / DATA SHEET

Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

