

SUBMITTAL / DATA SHEET


Perimeter  
Systems

*Innovative Aluminum Architecture*

A division of



8370 East Hwy 78  
Villa Rica, GA 30180  
800-334-9823 770-942-1207 Fax 942-4173

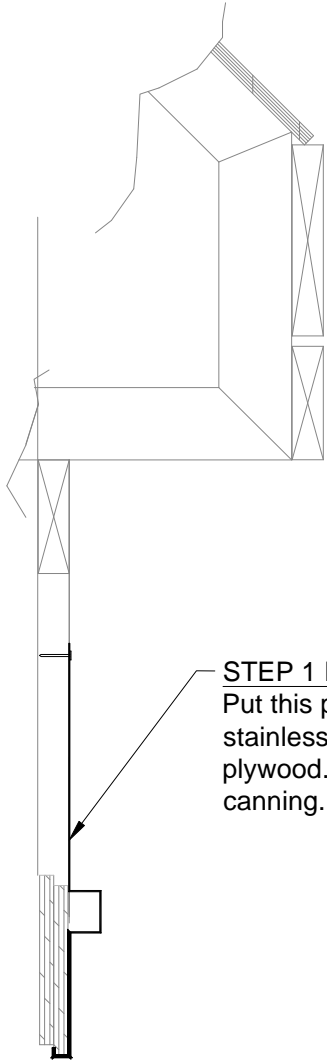

**STEP 1 INSTALL E**  
Put this piece snug against the plywood and use #10x1" stainless screws to fasten this piece to the plywood. Do not overdrive the screws as this will cause oil canning.

SUBMITTAL / DATA SHEET


Perimeter  
Systems

*Innovative Aluminum Architecture*

A division of



8370 East Hwy 78  
Villa Rica, GA 30180  
800-334-9823 770-942-1207 Fax 942-4173

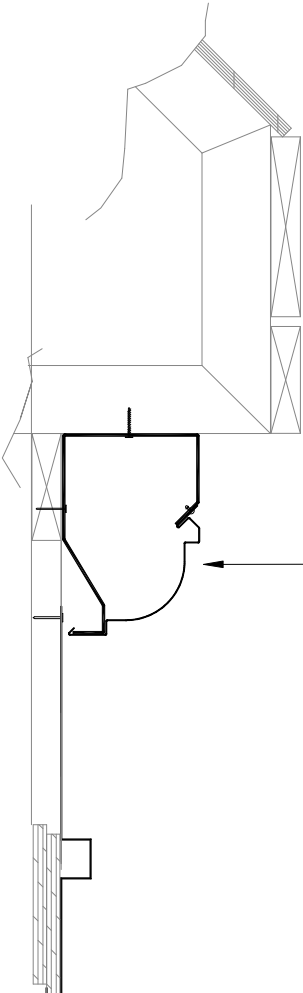


**STEP 2 - INSTALL BRACKET AND C**  
Fasten mounting bracket to 2x and truss with 2 -  
#10x1 $\frac{1}{2}$ " stainless screws, then put the convex  
moulding around the bottom of the bracket and  
fasten the top in place with an aluminum rivet.

SUBMITTAL / DATA SHEET

Perimeter  
Systems  
*Innovative Aluminum Architecture*

A division of **SAF**

8370 East Hwy 78  
Villa Rica, GA 30180  
800-334-9823 770-942-1207 Fax 942-4173

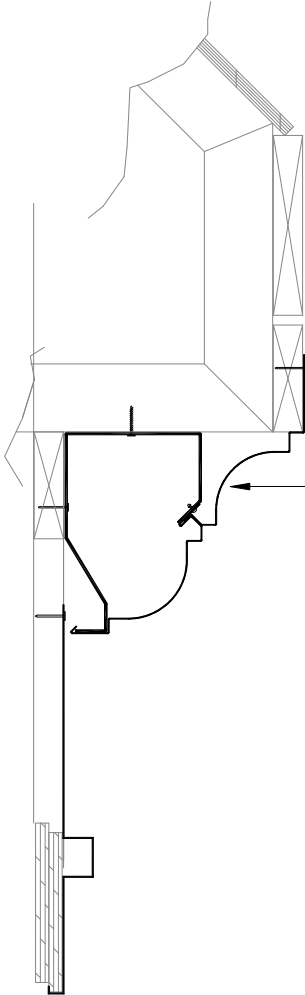

**STEP 3 - INSTALL B**  
Insert into lower cornice piece and fasten the top  
to the 2x with #10x1" stainless screws.

# SUBMITTAL / DATA SHEET

Perimeter  
Systems

*Innovative Aluminum Architecture*

A division of **SAF**

8370 East Hwy 78  
Villa Rica, GA 30180  
800-334-9823 770-942-1207 Fax 942-4173

