

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

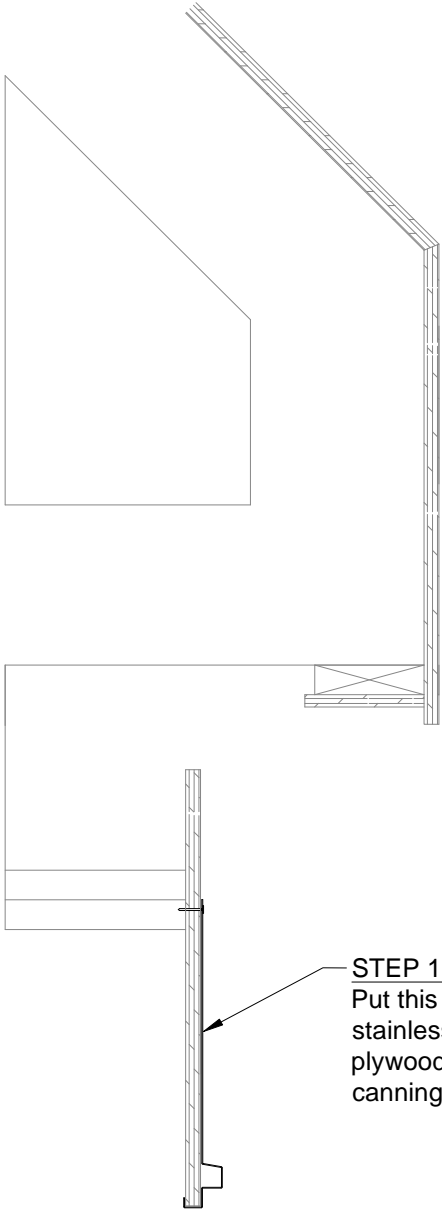

STEP 1 INSTALL E
Put this piece snug against the plywood and use #10x1" stainless screws to fasten this piece to the fasten it to the plywood. Do not overdrive the screws as this will cause oil canning.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

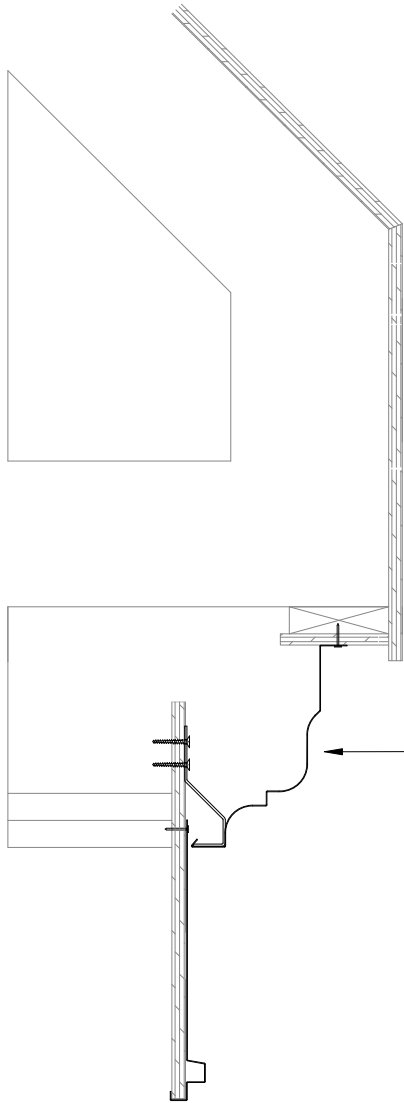

STEP 3 INSTALL D
Fasten mounting bracket to plywood with 2 -
#10x1 $\frac{1}{2}$ " stainless screws, then put the
roman moulding around the bottom of the
bracket and fasten the top in place to
plywood with #10x1" stainless screws.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

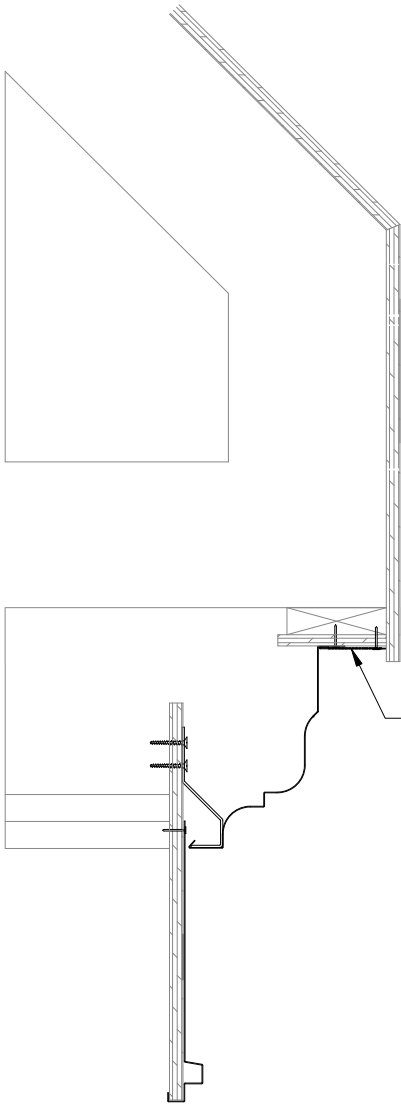

STEP 3 INSTALL C
Fasten the soffit vent to the plywood with #10x1" stainless screws.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

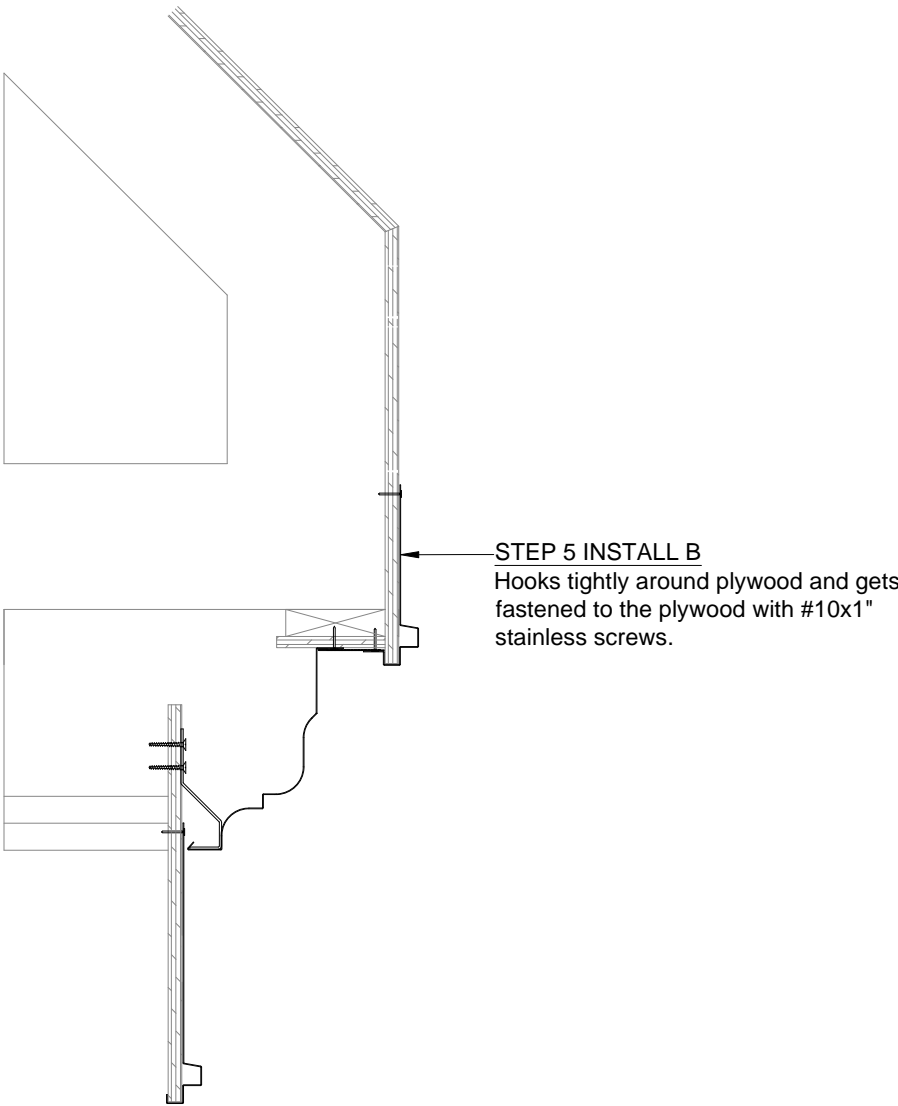

STEP 5 INSTALL B
Hooks tightly around plywood and gets fastened to the plywood with #10x1" stainless screws.

SUBMITTAL / DATA SHEET

Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

