

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

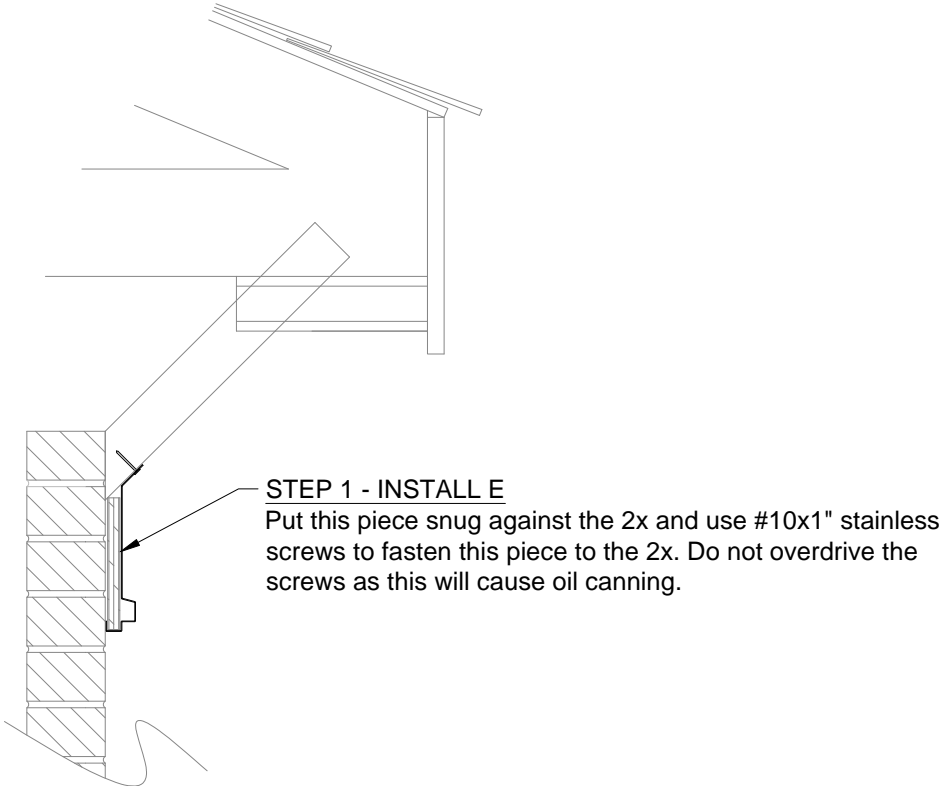


SUBMITTAL / DATA SHEET

Perimeter
Systems
Innovative Aluminum Architecture

A division of **SAF**

8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

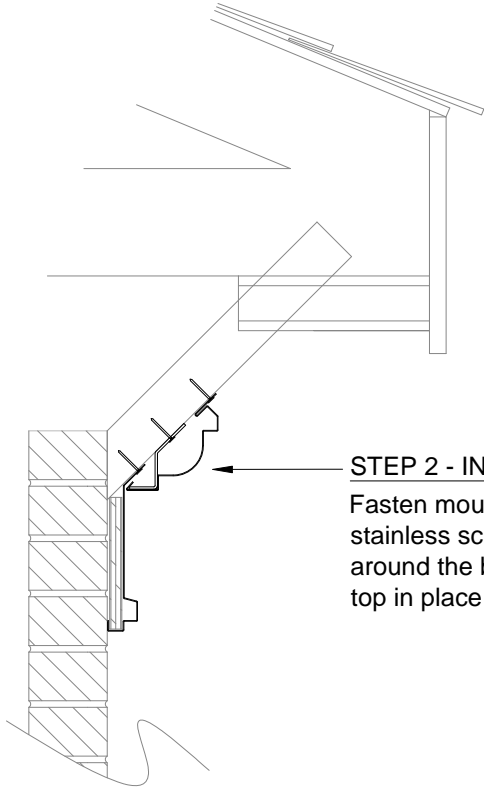

STEP 2 - INSTALL D

Fasten mounting bracket to 2x with 2 - #10x1 $\frac{1}{2}$ " stainless screws, then put the concave cornice around the bottom of the bracket and fasten the top in place to 2x with #10x1" stainless screws.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

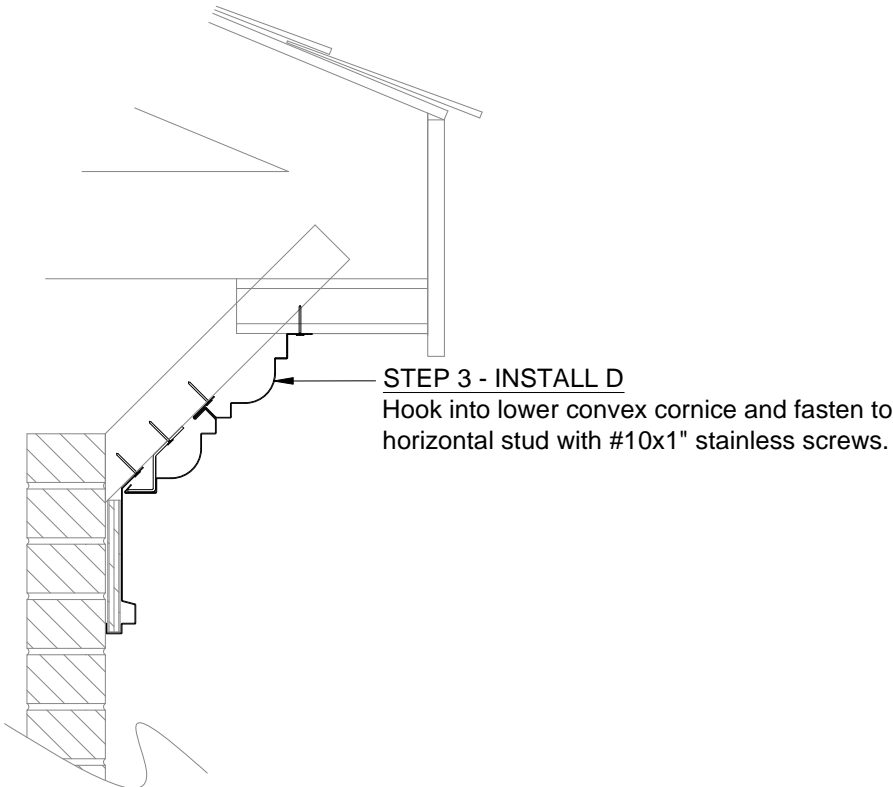

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

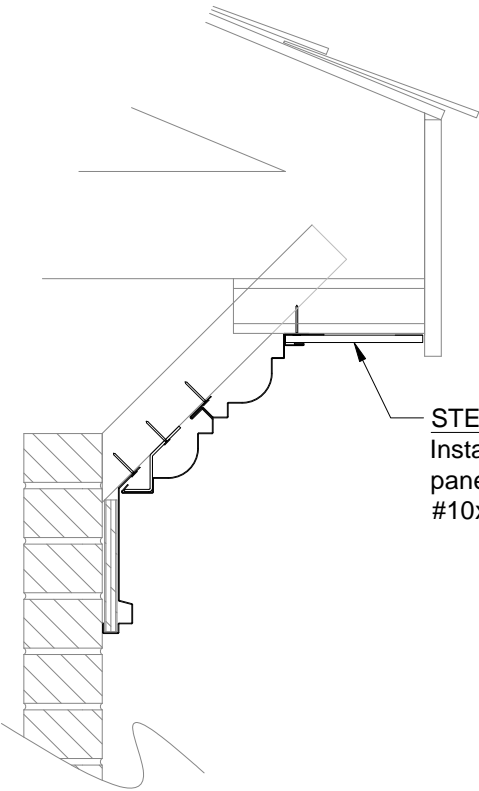

STEP 4 - INSTALL C
Install j-clips on one side that the soffit panel will fit into, to the horizontal stud with #10x1" stainless screws.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

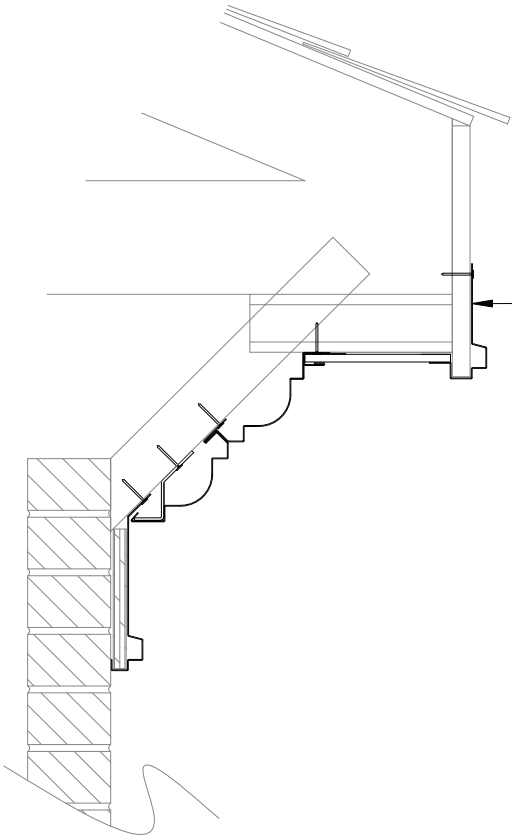

STEP 5 - INSTALL B
Hook around plywood (this piece will also hold up the other side of the soffit panel) and fasten to plywood with #10x1" stainless screws.

SUBMITTAL / DATA SHEET

Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

