

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

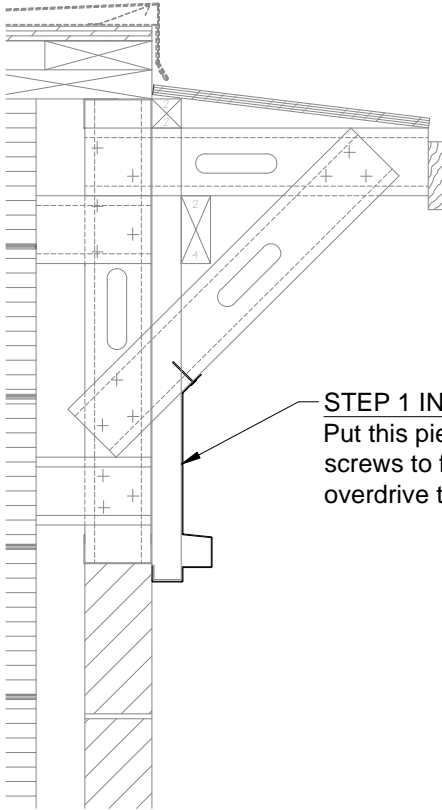


STEP 1 INSTALL D
Put this piece snug against the 2x and use #10x1" stainless screws to fasten this piece to the steel framing. Do not overdrive the screws as this will cause oil canning.

SUBMITTAL / DATA SHEET

Perimeter
Systems
Innovative Aluminum Architecture

A division of **SAF**

8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

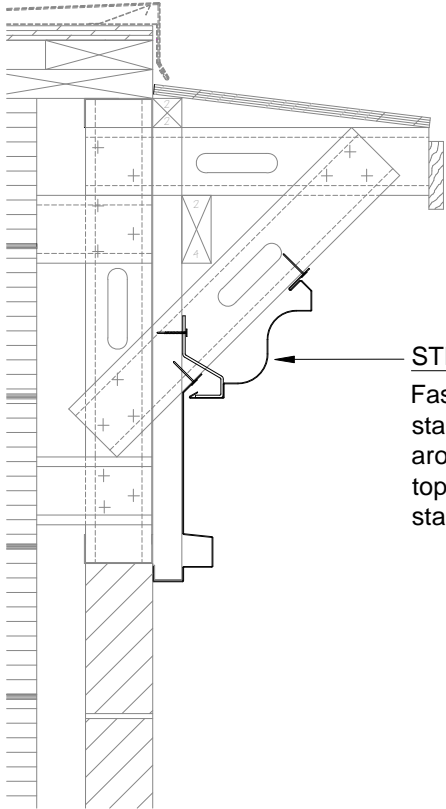


STEP 2 - INSTALL C
Fasten mounting bracket to 2x with 2 - #10x1½" stainless screws, then put the LZ-1 moulding around the bottom of the bracket and fasten the top in place to steel framing with #10x.75" stainless screws.

SUBMITTAL / DATA SHEET

Perimeter
Systems
Innovative Aluminum Architecture

A division of **SAF**

8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

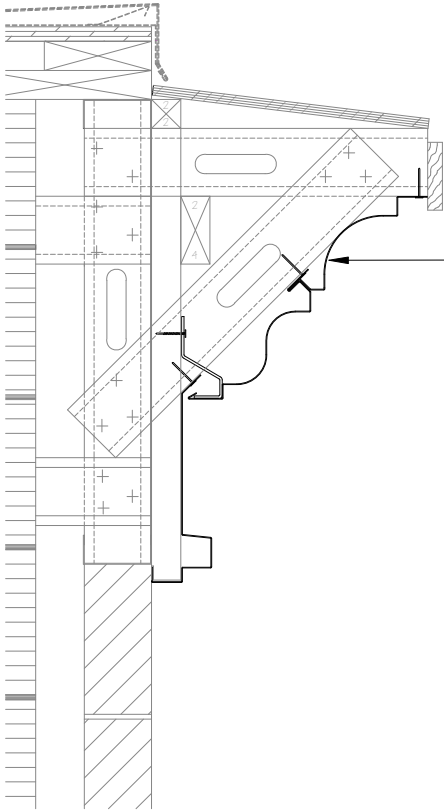

STEP 3 - INSTALL B
Hook the bottom of the concave piece into the top of the lower LZ-1 moulding and fasten it to the horizontal steel framing with #10x.75" stainless screws.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

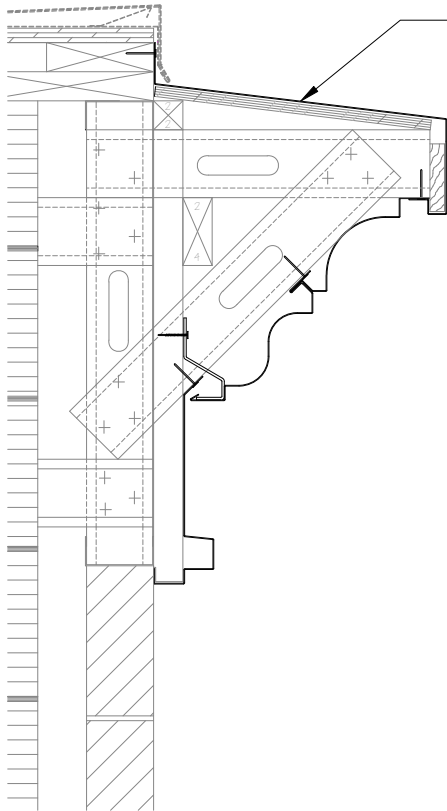

STEP 4 - INSTALL A
Hook around 1x and fasten to top to 2x
with #10x1" stainless screws.