

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

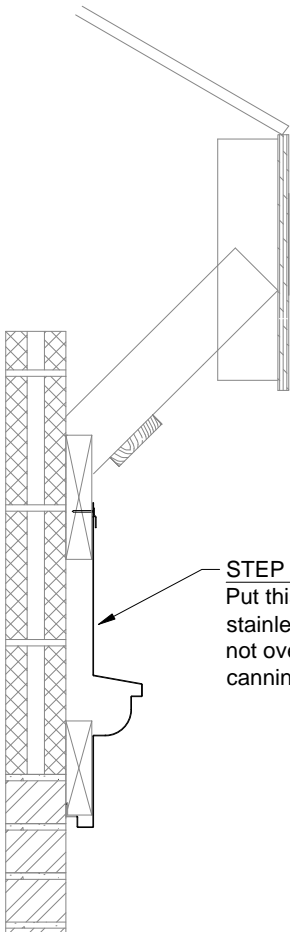

STEP 1 INSTALL E
Put this piece snug against the 2x and use #10x1" stainless screws to fasten this piece to the 2x. Do not overdrive the screws as this will cause oil canning.

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

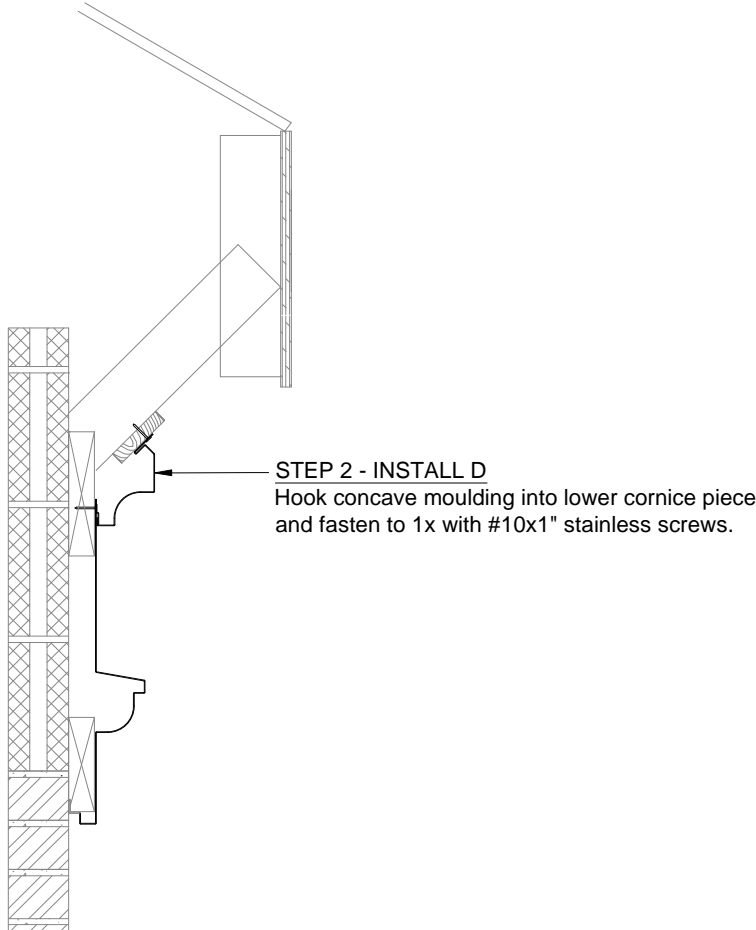

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

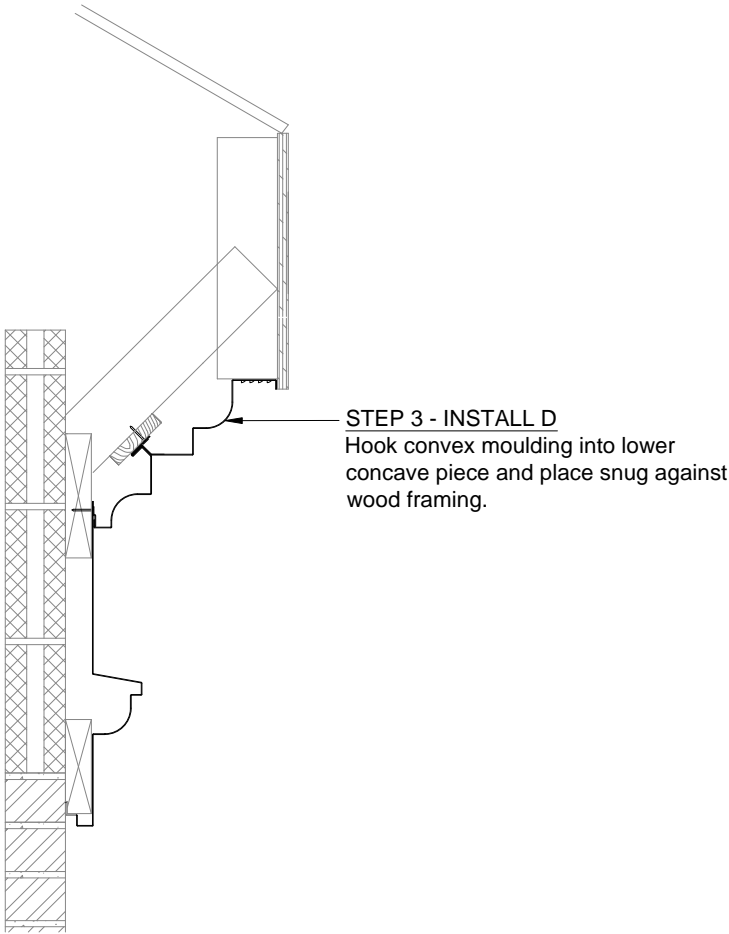

SUBMITTAL / DATA SHEET


Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

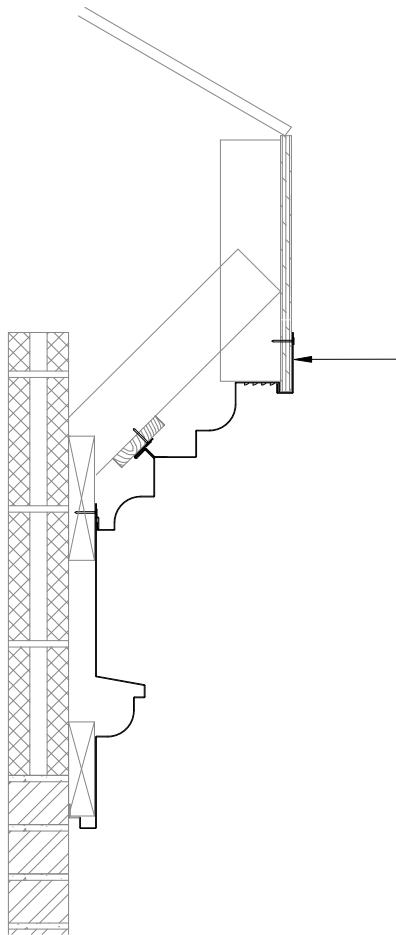

STEP 4 - INSTALL B
Hook j-cover around lower convex cornice to hold it in place and pull snug against plywood. Use #10x1" stainless screws to fasten this piece to the plywood. Do not overdrive the screws as this will cause oil canning.

SUBMITTAL / DATA SHEET

Perimeter
Systems

Innovative Aluminum Architecture

A division of



8370 East Hwy 78
Villa Rica, GA 30180
800-334-9823 770-942-1207 Fax 942-4173

